



R801P-R804P

ЗАПАСНЫЕ ЧАСТИ, СЕКАТОРЫ ERGO



- Предварительно собранные режущие головки для секаторов ERGO™ PX и PXR
- Поставляются с 4 крепежными винтами (R902P)

	 731151				
R801P	8234126	1	PX & PXR	1	126
R802P	8234133	1	PX & PXR	2	129
R803P	8234140	1	PX & PXR	3	139
R804P	8240806	1	PX-L & PXR-L	2	131

R211P/R300P/R500P/R600P

ЗАПАСНЫЕ ЧАСТИ, СЕКАТОРЫ ERGO



- Запасные режущие лезвия для секаторов ERGO™

	 731151			
R211P	8234027	1	PX/ PXR N° 2, P1-20, P2-20	60
R211P-BULK80	8252212	80	PX/ PXR N° 2, P1-20, P2-20	4800
R300P	8234034	1	PX/ PXR N° 1	52
R500P	8234041	1	PX/ PXR N° 3	65
R600P	8240783	1	PX-M2-L & PXR-M2-L	60

R303P-R603P

ЗАПАСНЫЕ ЧАСТИ, СЕКАТОРЫ ERGO



- Запасное опорное лезвие для секаторов ERGO™

	 731151			
R303P	8234157	1	PX-S1, PX-M1, PX-L1, PXR-M1, PXR-L1	63
R403P	8234164	1	PX-S2, PX-M2, PX-L2, PXR-M2, PXR-L2	66
R503P	8234171	1	PX-S3, PX-M3, PX-L3, PXR-M3, PXR-L3	72
R603P	8240790	1	PX-M2-L, PXR-M2-L	66